

Descaling **Auto Button**

Descaling is as important as changing the oil in your car every 3,000 miles. It is a process that eliminates mineral build up inside your boiler and ensures the machine's longevity. For normal household use we recommend descaling at least once every 3 months, depending on the volume of use and hardness of your local water supply.

There are many good descaling agents on the market today including Saeco's own product: Part number 524000, 3 packets, \$4.90 plus \$5.90 shipping and handling. Any descaling product used with Saeco machines should be citric based. Do not use vinegar or lemon juice as this will cause damage to the machine.

Tip: To ensure that the descaling solution completely dissolves, mix 1 packet of descaling solution with 1 cup of water, stir until powder is completely dissolved and pour into the water tank. Then add additional 3 cups of water.

WARNINGS

Do not swallow. Avoid eye contact. Wash hands after use.
Do not expose to heat. Keep out of reach of children.
This product is non-toxic, biodegradable and odorless.

Step by Step

For use with Caffe Charisma, Digital Italia, Italia and Incanto RS SBS.

1. Start with the machine turned off.
2. Remove the Aqua Prima water filter from the tank and fill with the descaling solution. (1 packet of Saeco descaling solution to 4 cups of water.)
3. Turn the machine on and press the descaling indicator light for 5 seconds. It will stop flashing.
4. Open the steam knob to begin the descaling process.
5. The machine will run the solution at intervals until the water tank is empty. The lights will flash to signal that the descaling cycle is complete. Close the steam knob.
6. Rinse the water tank thoroughly and flush the machine by running two tanks of clean water through the steam wand.
8. When water tank is empty, close the knob. Descaling is complete.

**For questions or concerns please contact Saeco Customer Service
at 800.933.7876 or email at support@saeco-usa.com.**